



ASSEMBLY INSTRUCTIONS FOR RACK-MOUNT HANDLES

1. Select your model from the diagrams shown. Read **WARNINGS** given at left of model before assembling rack-mount handles.
2. Remove existing screws at locations shown by line arrows.
3. Align handles to chassis and insert longer screws supplied (#6-32 x 1/2"). Tighten screws.


WARNING!

PVA 7: Only use Rack-Mount Kit on units with **three** screws on each side of chassis at front as shown. **Do not use if there are only two screws**—two screws are not sufficient to support weight of the PVA 7. Use a rack-mount shelf instead (available from rack manufacturer).


WARNING!

MCA 50: Only use Rack-Mount Kit on units with **four** screws on each side of chassis at front as shown. **Do not use if there are only two screws**—two screws are not sufficient to support weight of the MCA 50. Use a rack-mount shelf instead (available from rack manufacturer).

AVM 20

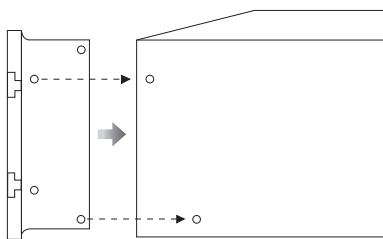

AVM 30

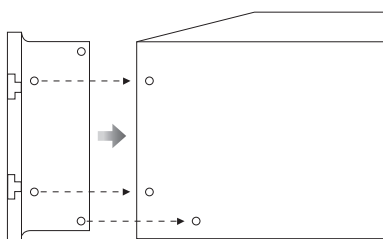


PVA 2


PVA 4

PVA 5

PVA 8

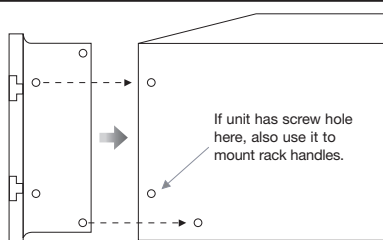


PVA 7

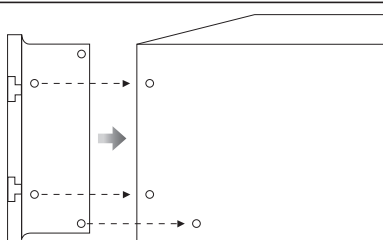


MCA 20

MCA 30

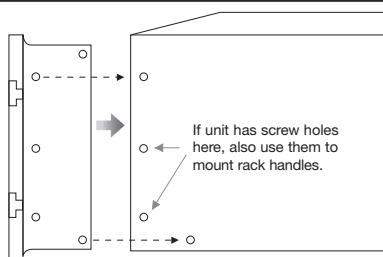

MCA 50

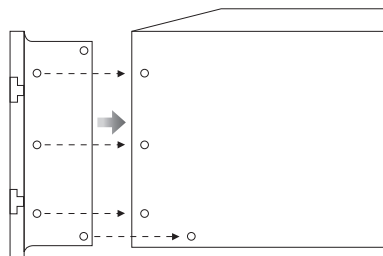

A T H E M™

INSTRUCTIONS D'ASSEMBLAGE POUR LES POIGNÉES DE MONTAGE SUR BÂTI

1. Sélectionner le diagramme correspondant au bon modèle. Lire **L'AVERTISSEMENT** apparaissant à gauche du diagramme avant de procéder à l'assemblage;
2. Retirer les vis des endroits indiqués par les flèches;
3. Aligner les poignées avec le bâti et insérer les vis plus longues fournies (#6-32 x 1/2 po). Visser fermement.


AVERTISSEMENT!

PVA 7: N'utiliser la trousse de montage sur bâti que pour les unités dotées **trois** vis de chaque côté du devant du bâti, tel qu'illustré. **Ne pas utiliser s'il n'y a que deux vis**—elles ne peuvent supporter le poids du PVA 7. Utiliser plutôt une étagère de montage (disponible auprès du fabricant de bâti).


AVERTISSEMENT!

MCA 50: N'utiliser la trousse de montage sur bâti que pour les unités dotées de **quatre** vis de chaque côté du devant du bâti, tel qu'illustré. **Ne pas utiliser s'il n'y a que deux vis**—elles ne peuvent supporter le poids du MCA 50. Utiliser plutôt une étagère de montage (disponible auprès du fabricant de bâti).

AVM 20

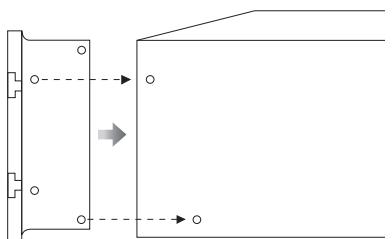

AVM 30

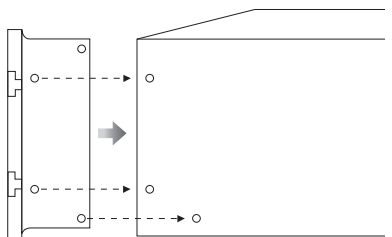


PVA 2


PVA 4

PVA 5

PVA 8

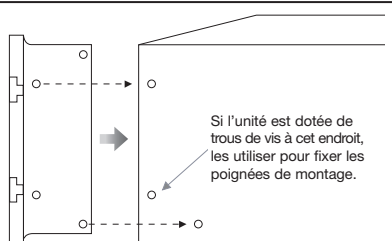


PVA 7

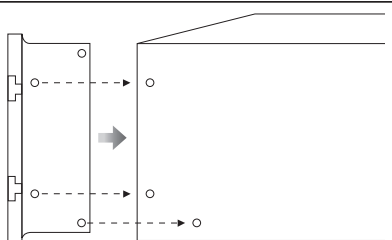

MCA 20

MCA 30

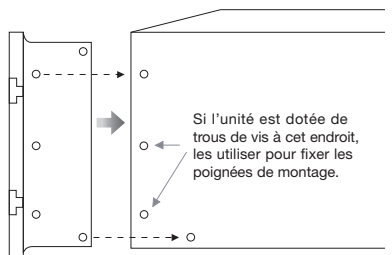

MCA 50

